


INSTALLATION INSTRUCTIONS
MILWAUKEE VALVE
HIGH PERFORMANCE BUTTERFLY VALVE (HPBV)
2-INCH THROUGH 8-INCH
MOUNTING THE LOCK LINK

These instructions cover mounting Lock Link to HPBV lever handle:

- **Parts List:**
 - Lock Link (Part No. H6710130110) (1)
 - Lever Handle (1)
- Assembly requires flat head screwdriver & 1/8" hex wrench.


LOCK LINK MOUNTING

1. Remove lever handle from valve by removing the set screws (1/8" hex) and sliding the handle off the stem.

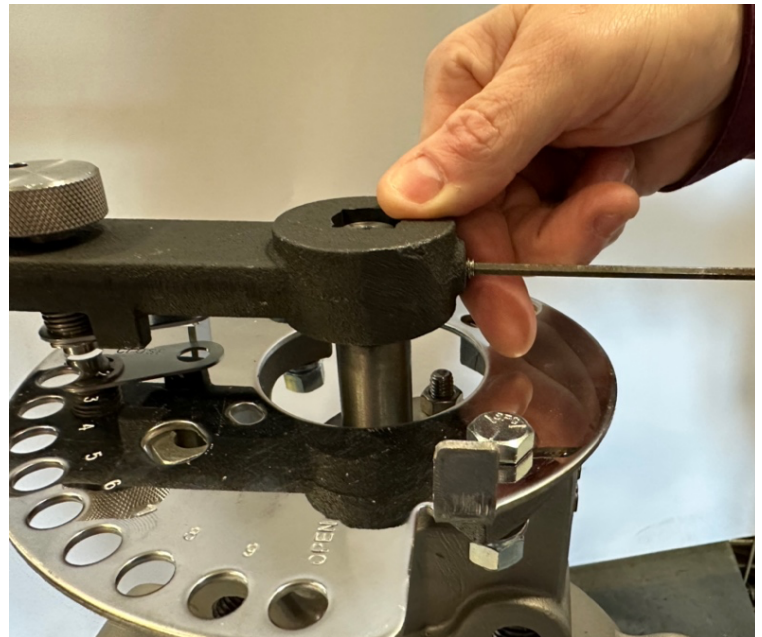

2. Turn the handle over and locate the clip on the Lock Knob. With a flat head screwdriver, Remove The Clip


- Note: the spring is compressed – use caution when removing the clip.

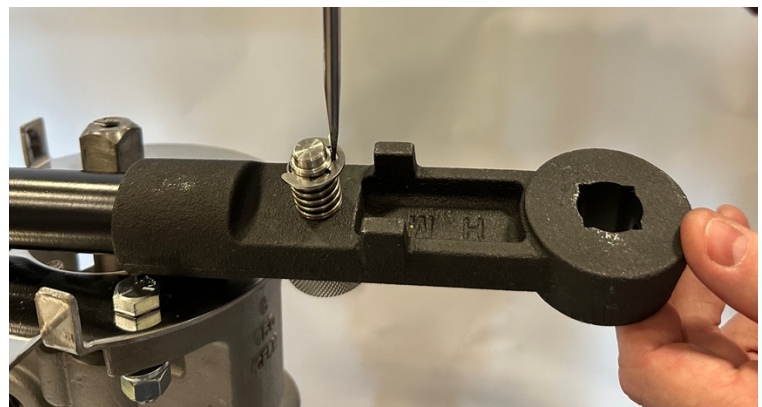

3. With the clip removed and the spring still on the Lock Knob, place the Lock Link (Larger Diameter Hole) over the Knob, compressing the spring down and reinsert clip into the groove of the Knob.




4. Reinstall Lever Handle onto the stem of the Valve. (Stem will **NOT** be flush with the top of the handle.)

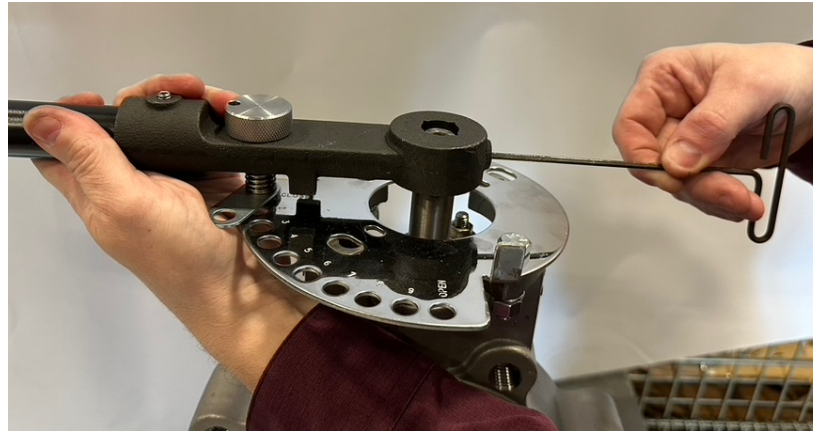

5. Adjust the engagement of the Lever Handle onto the Stem

- The Locking Pin, when in the up position, just clears the Latch Plate
- Yet when down in the latch position, engages into the **CLOSE** hole in the Latch Plate.

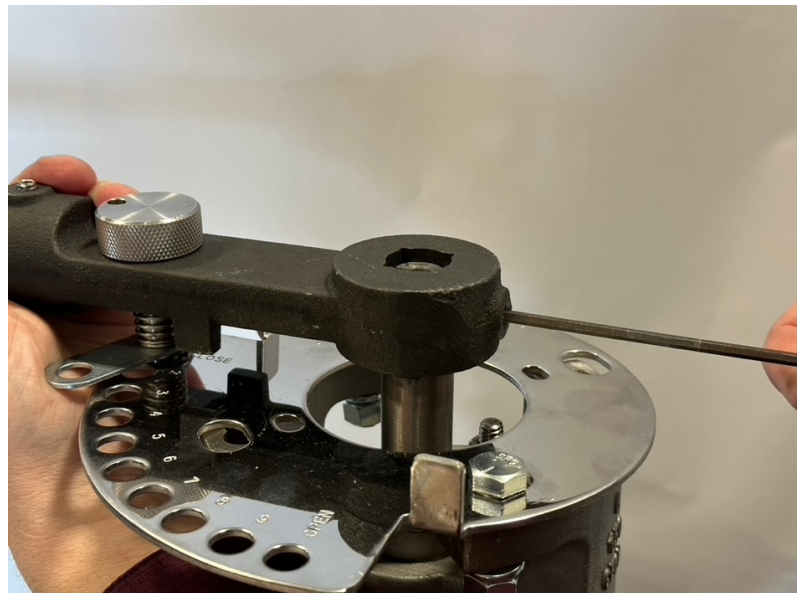

6. Add a padlock to prevent tampering with the disc fully open, fully closed, or in a throttling position.

